


The World's Best Rodent Control System

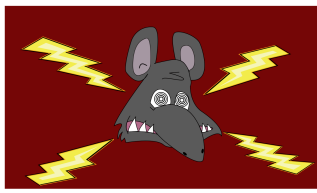

Kills Humanely With A Deadly Shock!

Raticator

Raticator Cleaning Instructions

When dust, dirt or other contaminants accumulate in the **Raticator**, you will need to clean the unit, otherwise it may trigger a false trip, causing the red light to blink repeatedly when you turn it on.

Remove batteries before cleaning to insure safety.

Obtain an inexpensive, thin aluminum pan large enough in width and length to accommodate the **Raticator**.

Fill the pan with approximately 1 inch of warm/hot water, a teaspoon of vinegar and an ample amount of dish detergent. Set the **Raticator** in the pan and let it soak for approximately 1 hour (to loosen debris.)

Using a soft bristle or bottle brush, commonly found in the cookware section of your local supermarket, gently brush the bottom of your **Raticator**.

To rinse, carefully allow a gentle stream of fresh water to flow over the cleaned bottom surface of the **Raticator**. Do not spray the unit out or allow moisture to intrude into the electronics that are housed in the top of the **Raticator** as this may cause the electronics to short out and impair the unit's performance.

After cleaning and rinsing the bottom of the **Raticator** thoroughly, place it with the open side face down to allow the **Raticator** to drain and air dry completely (do not use air compressor) before putting it back into service (about 2 to 3 hours).